


## 1、 connect cam with receiver

Take Corona R6FA-SB as an example, you can use other receiver, but need to adjust to PWM mode, for your receiver, please check the receiver manual.



Connect PWM signal cable to corresponding receiver channel, GND to GND

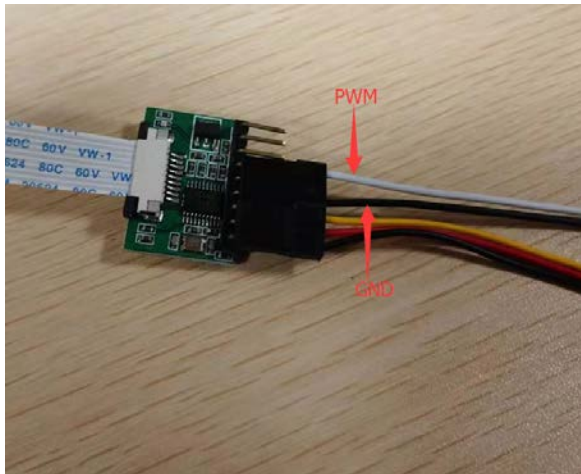

## 2 Controller Setup

In this example, we connect camera to receiver CH5, controller setup as follows:

Take FUTABA T14SG as an example

1. Frequency match according to receiver manual
2. Setup controller as the pics



3. Map CH5 to the button, we map CH5 to SG stick in this example, you also can use other channel for mapping.



4. Remote control zoom

Use SG stick to control zoom, switch SG stick to down, cam is default 1x zoom, switch SG stick middle, cam is 10x zoom.